



Invigoration® Series

Tandem steam generator control kit

K-5558

Features

- Controls the Power Clean feature.
- Adjustable temperature settings between 90 and 125 degrees Fahrenheit.
- Quick-connect RJ-12 cord and connector.
- Mounting arm and gasket.
- Two thermostatic steam heads with aromatherapy reservoirs.
- Includes control panel and two steam heads with aromatherapy reservoirs.
- Circular steam head design allows steam to be evenly dispensed throughout shower.
- 20-minute safety auto shut-off.
- Digital clock.
- For use with Invigoration™ Series 18kW - 30kW Steam Generators.
- Required for use with KOHLER Invigoration® Series 18kW-30kW steam generators.
- Improved sensor reduces temperature fluctuations for a consistent steam shower temperature.
- Easily adjustable control panel allows user to set temperature (90-125°F range) and steam session duration.

Material

- KOHLER finishes resist corrosion and tarnishing.

Technology

- Power Clean™ technology offers one-touch automatic cleaning and safe maintenance.
- Fast-Response® technology produces a luxurious steam shower in 60 seconds.

Recommended Products/Accessories

K-23723 Faucet cleaner



Codes/Standards

None Applicable

KOHLER® Steam Generator Three-Year Limited Warranty

See website for detailed warranty information.

Available Colors/Finishes


Color tiles intended for reference only.

Color Code Description

	CP	Polished Chrome
	SN	Vibrant® Polished Nickel
	BN	Vibrant® Brushed Nickel
	BV	Vibrant® Brushed Bronze
	2BZ	Oil-Rubbed Bronze
	BL	Matte Black
	TT	Vibrant Titanium



Invigoration® Series
Tandem steam generator control kit
K-5558

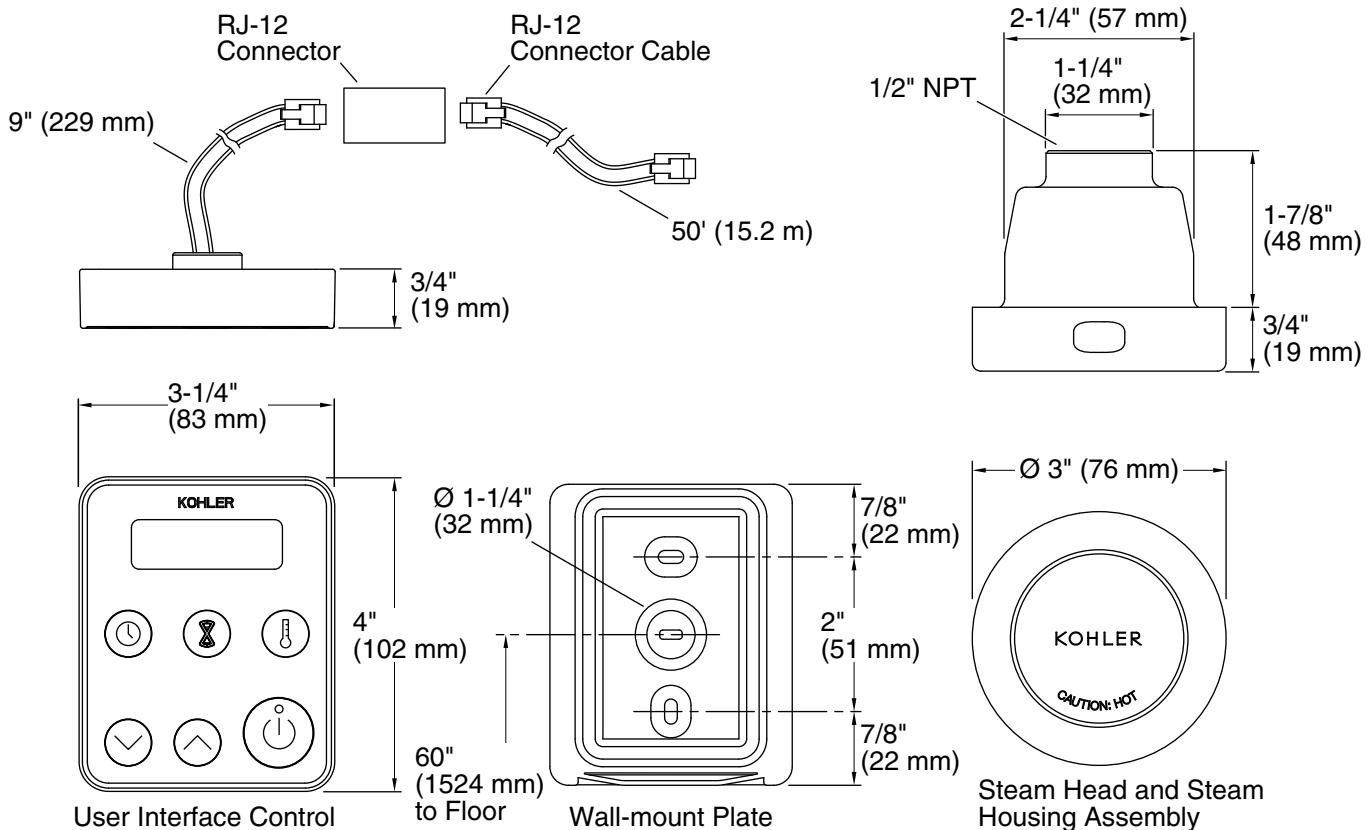

Technical Information

All product dimensions are nominal.

Installation Type: Wall-mount

Material: Plastic

Notes

Install this product according to the installation guide.

CAUTION: Risk of personal injury. Do not install the User Interface Control outside the steam enclosure. The User Interface must be installed within the enclosure to allow the sensors to regulate the temperature and control the flow of steam.

CAUTION: Risk of scalding. Do not locate the steam head near a seat or bench, as the steam head is hot during operation and may scald the user if touched.

The temperature sensor should be mounted on the wall opposite the steam head. The steam head should be located as far from the seating area as possible.

Locate the steam head 6" (152 mm) above the floor and at least 4-1/2" (114 mm) from the threshold.