


# PRODUCT SUBMITTAL 521

## Expander Head G SDR 11 PEXa Pipe



**Product:** Expander Head G SDR 11 PEXa Pipe

**Date:** 01 June 2023 (supersedes, 01 January 2018)

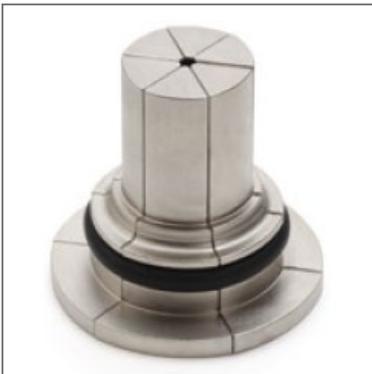

Article No.	Nominal Size (mm)	Pipe Dimension	Tool
138463-001	40	SDR 11	G1/G2
137424-001	50	SDR 11	G1/G2
137434-001	63	SDR 11	G1/G2
137584-001	75	SDR 11	G1/G2
137604-001	90	SDR 11	G1/G2
137614-001	110	SDR 11	G1/G2
138006-001	125	SDR 11	G1/G2

### FUNCTIONAL DESCRIPTION

Expander heads are used to expand RAUTHERM-FW PEXa pipes. Use with the RAUTOOL hydraulic expander for both the G1 and G2 tool kits.

For updates to this publication, visit [na.rehau.com/resourcecenter](http://na.rehau.com/resourcecenter)

The information contained herein is believed to be reliable, but no representations, guarantees or warranties of any kind are made as to its accuracy, suitability for particular applications or the results to be obtained therefrom. Before using, the user will determine suitability of the information for user's intended use and shall assume all risk and liability in connection therewith.

© 2023 REHAU