

# Invigoration® Series

## Digital steam adapter kit K-5548-K1

#### Features

- Allows Kohler Invigoration<sup>®</sup> steam generator to be controlled via the DTV+<sup>™</sup> and Anthem<sup>™</sup> showering system
- For use with Kohler Invigoration<sup>®</sup> Steam Generators between 5 and 15 kilowatts
- Adjustable temperature settings between 90°F and 125°F
- Aromatherapy reservoir on steam heads
- Includes steam head, temperature sensor, and adapter
- Circular steam head design allows steam to be evenly dispensed throughout shower
- 20-minute safety shutoff
- Quick-connect RJ-12 cord and connector for simplified installation and service
- Not compatible with other manufacturers' steam generators

#### Material

KOHLER<sup>®</sup> finishes resist corrosion and tarnishing

#### Installation

Requires DTV+<sup>™</sup> or Anthem<sup>™</sup> showering components (sold separately)

## **Required Products/Accessories**

- K-5525 5 kW Steam Generator
- or
- K-5526 7 kW steam generator
- or
  - K-5529 9 kW Steam Generator
- or

K-5533 13kW steam generator

or K-5535 15 kW Steam Generator

or

K-27756 System controller module

or

K-28214-ASC Digital control



Codes/Standards None Applicable

KOHLER® Electronic Faucets, Valves, and Controls Five-Year Limited Warranty See website for detailed warranty information.

## **Available Colors/Finishes**

Color tiles intended for reference only.

**Color Code Description** 


CP	Polished Chrome
SN	Vibrant® Polished Nickel
BV	Vibrant® Brushed Bronze
2BZ	Oil-Rubbed Bronze
BL	Matte Black
TT	Vibrant Titanium



# KOHLER. Faucets

# Invigoration® Series

Digital steam adapter kit K-5548-K1

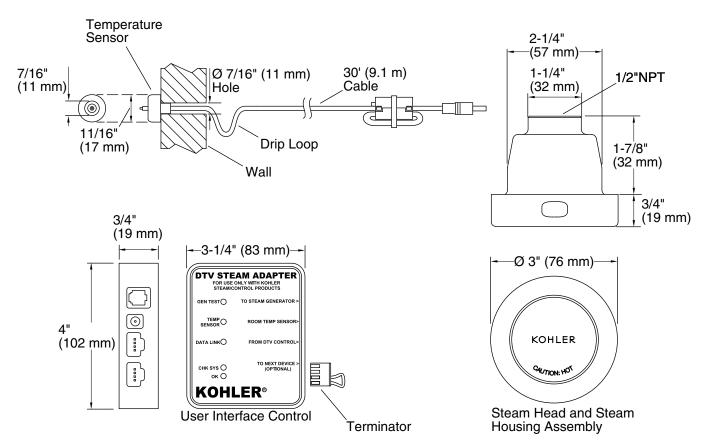

## **Technical Information**

All product dimensions are nominal. Drain included: No

#### Notes

Install this product according to the installation guide.

CAUTION: Risk of scalding. Do not locate the steam head near a seat or bench, as the steam head is hot during operation and may scald the user if touched.

The temperature sensor should be mounted on the wall opposite the steam head. The steam head should be located as far from the seating area as possible.

Locate the steam head 6" (152 mm) above the floor and at least 4-1/2" (114 mm) from the threshold.

