

- Insert the lift rod into the hole in the center of the tank cover.
- Align the bent horizontal portion of the rod with the hole pointed toward the front of the tank.
- Hand tighten the nut. Then wrench tighten it an additional 1/4 turn.

