REFRIGERANT DETECTION SYSTEM

What you need to know about field-installed kits



Field-convertible Coils & Air Handlers


Convertible coils and air handlers ship to you ready for R-410A installations. Here's what you need to know to convert them to R-454B refrigerant:

- You'll need a R-454B TXV to replace the factory installed R-410A TXV in the convertible coil or air handler.
- 2. A refrigerant sensor needs to be installed in the factory installed mounting bracket.
- 3. Depending on the orientation of the air handler, the mounting bracket may need to be relocated. Units ship ready for up-flow installation.
- 4. If the job has a furnace that does not have built-in refrigerant detection system controls, or you're using a convertible air handler, you'll need to add external controls to the system.
- 5. Be sure to apply the supplied R-454B labels once the coil or air handler is converted.
- 6. Refer to the chart for components needed in different applications.

Factory-ready R-454B Components

When you're installing a dedicated R-454B coil and outdoor unit, coils have a factory installed sensor. For an existing furnace or if the new furnace does not have built-in refrigerant detection system controls, you'll need external controls.

Air Handlers will ship from the factory with both the refrigerant detection system sensor and refrigerant detection system controls built-in – no field modification required.

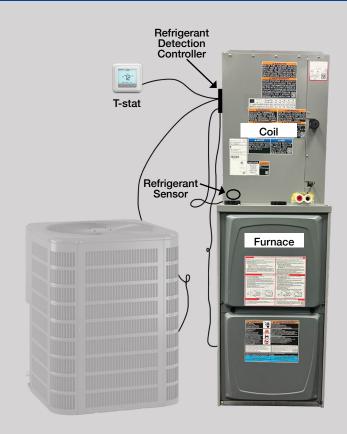

Installation Instructions



Coil Sensor



Communicating Board



Air Handler Sensor



Non-Communicating Board

Scan QR codes for full installation instructions and wiring diagrams



When is a Refrigerant Detector Sensor or Control Needed?

	Furnace Without Built-in Controls	Furnace With Built-in Controls	Air Handlers
2024 R-410A Multi-refrigerant Coil (-01)			
Designated R-454B Coil (-71)			

Legend:



Refrigerant Detection System Control Kit

- Reacts to refrigerant leak
- Factory or field installed near furnace or AHU



Refrigerant Detection System Sensor Kit

- Senses refrigerant leak
- Factory or field installed near coil

Furnace or Air Handler <u>Without</u> Refrigerant Detection System Controls			
Multi-refrigerant Coil	27A05 - Non-communicating Controls 27A06 - Communicating Controls 26Z69 - Coil Sensor		
Dedicated R-454B Coil	27A05 - Non-communicating Controls 27A06 - Communicating Controls		
Multi-refrigerant Air Handler	27A05 - Non-communicating Controls 27A06 - Communicating Controls 27J27 - Air Handler Sensor		
Dedicated R-454B Air Handler			

Furnace or Air Handler <u>With Built-in</u> Refrigerant Detection System Controls		
Multi-refrigerant Coil	26Z69 - Coil Sensor	
Dedicated R-454B Coil	No Kit Needed	
Multi-refrigerant Air Handler		
Dedicated R-454B Air Handler	No Kit Needed	

If a Refrigerant Leak Occurs:

- 1. System turns off
- 2. Blower turns on to circulate air & dilute
- 3. System restored when below threshold

Error Codes		
Green	Operating normally	
Flashing Green	Turning on	
Blue	Went through mitigation	
Flashing Blue	Refrigeration detected	
Red	See IOM for codes	