


SERVICE KIT INSTRUCTIONS

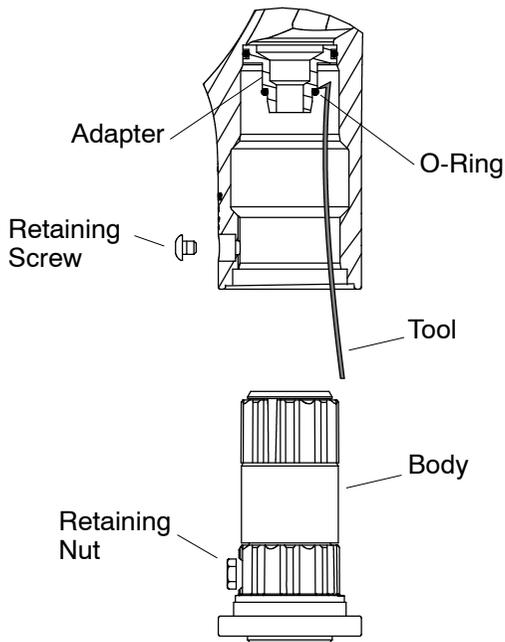

O-Ring Replacement

- Turn off the hot and cold water supplies.
- Use a 1/8" hex wrench to remove the retaining screw from the faucet body.
- Lift the faucet off the lower body by lifting straight up on the spout. The O-ring may remain inside the lower valve body.
- Remove the O-ring from inside the lower valve body or use a hooked tool to remove the O-ring from the adapter inside of the faucet. Make sure that the lower O-ring did not stay in the lower valve body.
- Install the new O-ring on the adapter in the faucet.
- Make sure that the retaining nut is in place in the lower valve. Slide the faucet over the lower body, aligning the hole in the faucet with the nut.
- Install the retaining screw through the faucet and into the lower valve body. Use the 1/8" hex wrench to tighten the screw.
- Turn on the water supplies and check for leaks.

USA: 1-800-4-KOHLER

kohler.com
© 2004 Kohler Co.

1036790-9-A