




SMART PLUMBING STARTS HERE!

SHOWER PAN INSTALLATION KITS FOR FULL MORTAR BED & CERAMIC TILE INSTALLATIONS*

Only tools required are a utility knife and staple gun

*Shower drain and drain pipe must be installed first

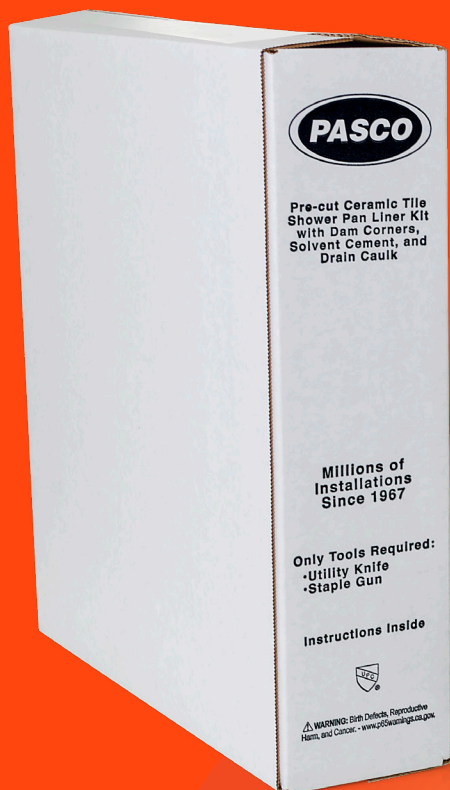

Kit contains:

Pre-Cut shower pan liner

One pair shower pan dam corners

One 1/4 pint shower pan solvent cement

One 3 oz. tube butyl rubber drain sealing caulk



Since 1967 PASCO Shower Pan Liner has been installed in millions of ceramic tile showers Meets or exceeds the specifications of ASTM D4551

40 Mil THICKNESS	PART NUMBER	SIZE
	40-56	5' x 6'
	*40-58	5' x 8'
	40-510	5' x 10'
	40-66	6' x 6'
	40-68	6' x 8'
	40-610	6' x 10'

*Most popular size

30 Mil THICKNESS	PART NUMBER	SIZE
	30-56	5' x 6'
	30-58	5' x 8'
	30-510	5' x 10'
	30-66	6' x 6'
	30-68	6' x 8'
	30-610	6' x 10'

Installations instructions enclosed
IAPMO listed

P.O. Box 1667 South Gate, CA 90280 • Phone (310) 537-7782 • Fax (800) 737-2726

7529 Perryman Court Curtis Bay, MD 21226 • Phone (410) 360-5010 • Fax (877) 377-6466



**SMART PLUMBING
STARTS HERE!**

Nitrile Gloves



- Nitrile
- Resistant to solvent cements
- 5 Mil thickness
- Durable
- Powder free
- Non-Sterile
- Disposable
- Ambidextrous



PART #	SIZE
950L	LARGE
950XL	EXTRA LARGE

BACK in **STOCK**



P.O. Box 1667 South Gate, CA 90280 • Phone (310) 537-7782 • Fax (800) 737-2726

7529 Perryman Court Curtis Bay, MD 21226 • Phone (410) 360-5010 • Fax (877) 377-6466