


Product Instructions



SVC Compression PEX Adapter 5/16" - 5/8"

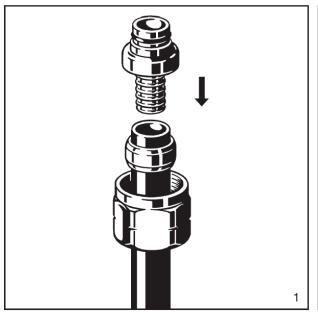

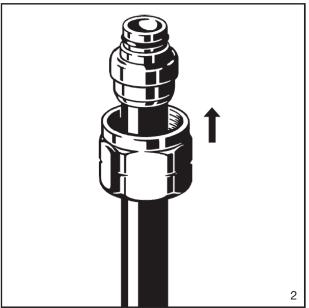

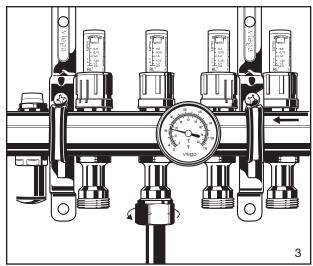



- Square off tubing to proper length. Slide compression nut up tubing and slip brass ferrule over tubing.
- 2. Slide tubing over end of SVC adapter, pushing it on fully until tubing is flush with shoulder of fitting.
- 3. Insert SVC adapter into seat (manifold or other fitting) and tighten compression nut with wrench. Re-tighten compression nut slightly after 30 mins.


Product Instructions




SVC Compression PEX Adapter 3/4"

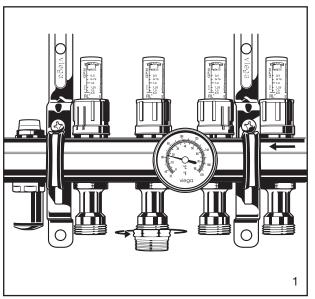

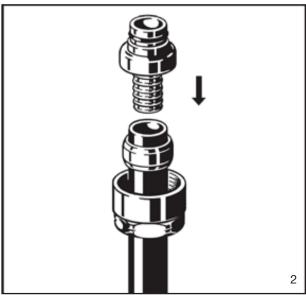

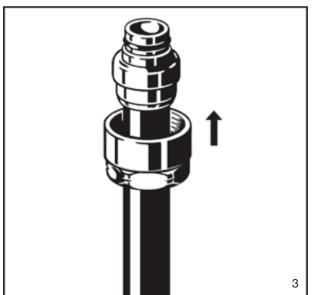

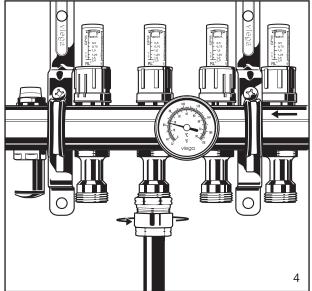

- 1. Tighten threaded adapter onto seat (manifold or other fitting).
- 2. Square off tubing to proper length. Slide compression nut up tubing and slip brass ferrule over tubing.
- 3. Slide tubing over end of SVC adapter, pushing it on fully until tubing is flush with shoulder of fitting.
- 4. Insert SVC adapter into seat (manifold or other fitting) and tighten compression nut with wrench. Re-tighten compression nut slightly after 30 mins.

This document subject to updates. For the most current Viega technical literature please visit www.viega.us. Click Services -> Click Electronic Literature Downloads -> Select Product Line -> Select Desired Document

Para ver las instrucciones en español visite www.viega.us -> Services -> Electronic Literature Downloads -> French and Spanish Documents -> Documento Deseado

Pour obtenir des instructions en français visite www.viega.us -> Services -> Electronic Literature Downloads -> French and Spanish Documents -> Document Désiré