

Clear PVC with Durable Schedule 40 PVC Fittings

Simple and Quick to Install


Variety of Models to Fit Many
Different Applications

Trap Assembly Instruction

1. Screw Adapter (E) into 3/4" primary drain outlet.
2. Assemble components without glue to ensure fit. Mark as needed. Rotate clear U trap (B) and Tee (A) to correct angle for installation.
3. Glue components (A through C and G) into place. Glue assembly into Adapter (E).
4. Glue drain line (F) into center portion of Cleanout Tee (C). The drain line must exit with at least a 5 degree downward angle.
5. Attach label to unit.
6. Install CS-2 Condensate Safety Overflow Switch (I) according to separate instructions.

Drain Trap Kit Product Guide

Catalog No.	Trap Type	Cleaning Brush	Float Switch
DTK113	1" DROP	NO	NO
DTK113B	1" DROP	YES	NO
DTK205	3" DROP	YES	YES
DTK207 with Cross	1" DROP	YES	YES
DTK210	1" DROP	YES	YES
DTK626	1" DROP	YES	YES

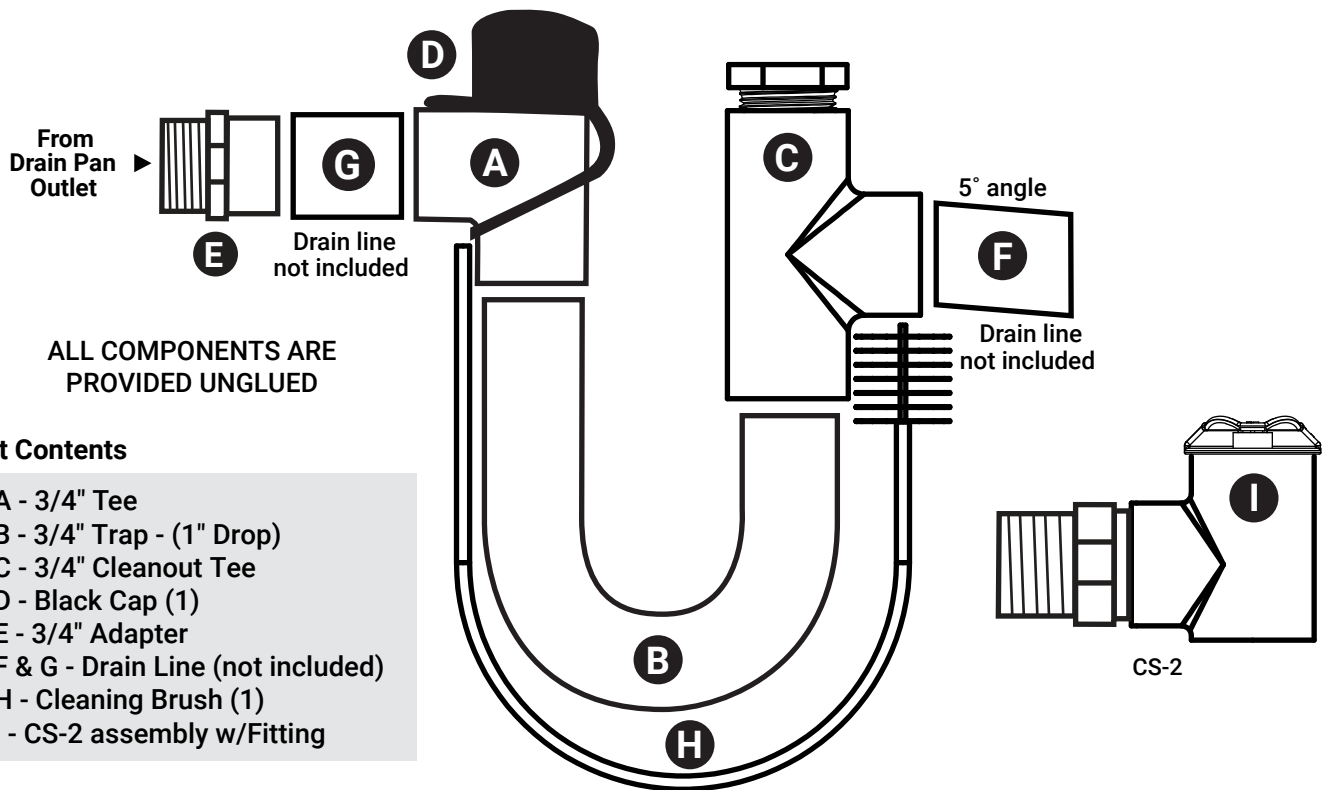

ALL COMPONENTS ARE PROVIDED UNGLUED

Kit Contents

- A - 3/4" Tee
- B - 3/4" Trap - (1" Drop)
- C - 3/4" Cleanout Tee
- D - Black Cap (1)
- E - 3/4" Adapter
- F & G - Drain Line (not included)
- H - Cleaning Brush (1)
- I - CS-2 assembly w/Fitting