




**MultiBox™ Single Auxiliary/Water Softener Adapter**

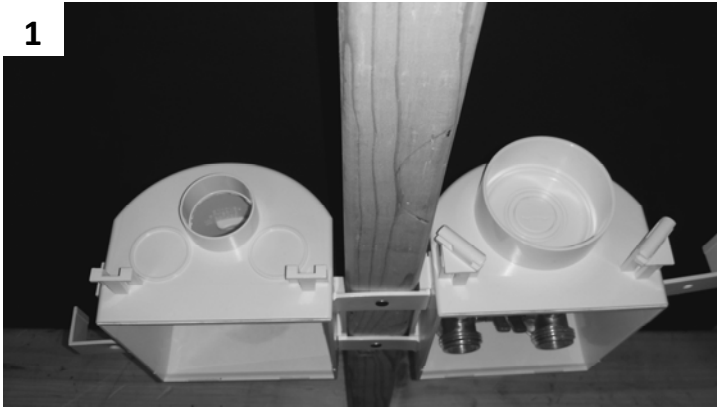


1 Remove 1" knockout

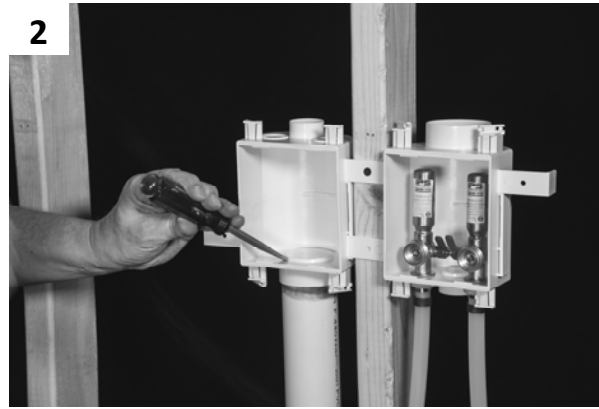

2 Install box on 2" drain line using proper Weld-On® cement (PVC/ABS) and allow to dry before testing drain system. Remove 2" drain knockout if no leaks are found.

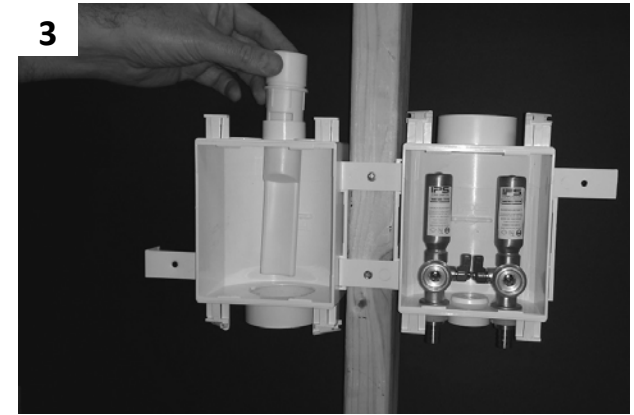


3 Install Water Softener Adapter in 1" Drain socket through top of box, ensuring the air gap opening faces front of box.

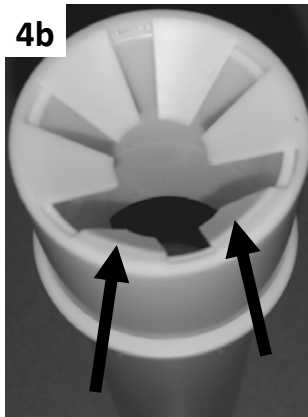


4a: Integrated locking tabs not pushed downward.

4b: For high output systems it is recommended that the two tabs at the rear of water softener adapter be pushed downward to locate the discharge pipe over the drain tube.

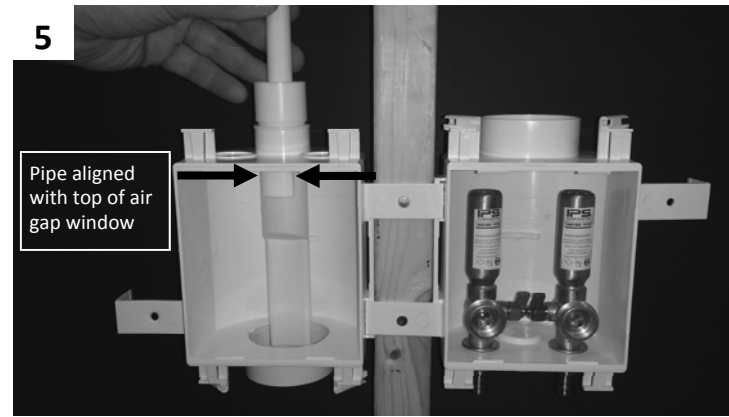

5 Install system drain line into the adapter ensuring the line is even with the top of the air gap opening. Secure system drain line to building structure with appropriate clamp.

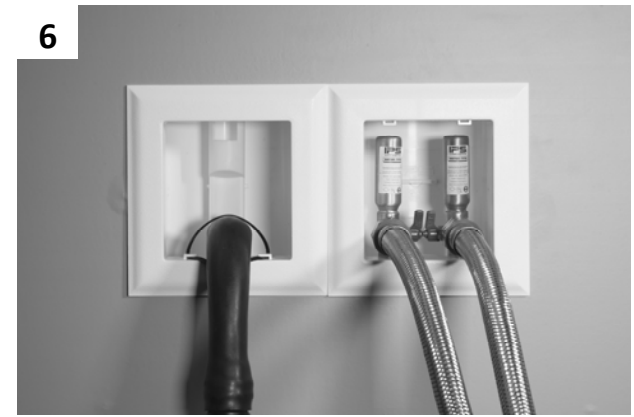

6 Washing machine drain hose can be installed with adapter in place and secured with integrated tie down slots.